


HP
StorageWorks

EML E-Series
Interface
Manager
CompactFlash
Replacement

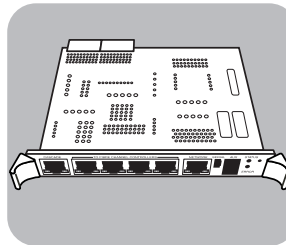

Caution: Parts can be damaged by electrostatic discharge. Keep parts in their containers until needed. Make sure you are properly grounded when touching static sensitive components.




Caution: This part is not hot-pluggable. It is necessary to power off the library to replace this part.

This document explains how to replace the CompactFlash memory card on the Interface Manager card that is installed in an HP StorageWorks EML E-Series tape library.



Caution: This procedure causes all Interface Manager card configuration settings to be lost. You must reconfigure the Interface Manager card after replacing the CompactFlash card. These configuration settings are listed in the *Initial configuration steps* section of the *HP StorageWorks Interface Manager and Command View TL user guide*. If possible, write down all of the current configuration settings from the Interface Manager card before replacing the CompactFlash card.

1

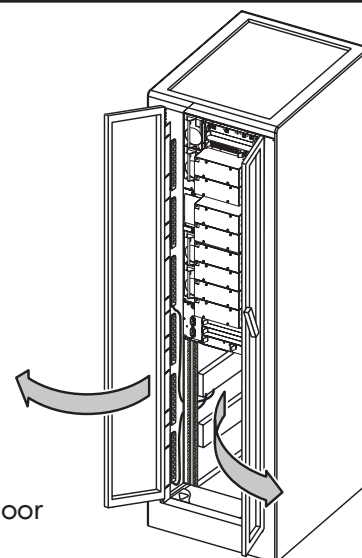

Open the back door of the library.


2

Power off the library.

- a. Stop all library activity and ensure that the picker is empty.
- b. Set the library power switch at the upper right corner to the **OFF** position.
- c. Ensure that all power indicators on the power supplies are off.


3

Identify the Interface Manager. It is located in the bottom slot of the base module card cage.

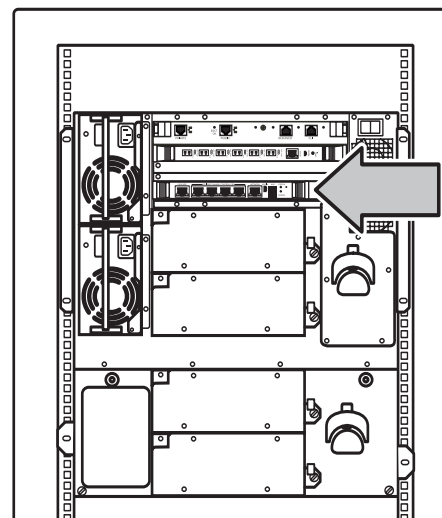


4

Removing the Interface Manager Card

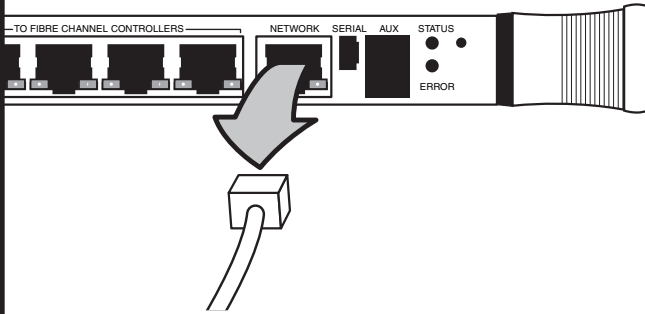

Note the location of all cables connected to the Interface Manager card, and then remove the cables.


5

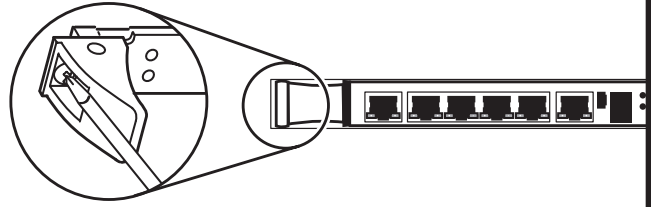

Use a #2 Phillips screwdriver to loosen the captive screws in the black ejector handles at both ends of the Interface Manager card. Push the ejector handles toward the outside, then pull them to remove the controller.

6


Replacing the CompactFlash Card

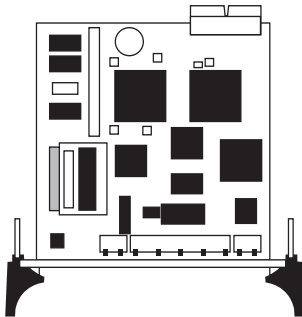

- a. Position the existing Interface Manager card battery-side up to access the CompactFlash card.


7

- b. Note the orientation of the CompactFlash card, then grasp the edges of the CompactFlash card and slide it out of the flash memory slot. If needed, push a pen into the corner notches of the flash memory slot to unseat the memory module.
- c. Remove the replacement CompactFlash card from its protective packaging and place it on your work surface.

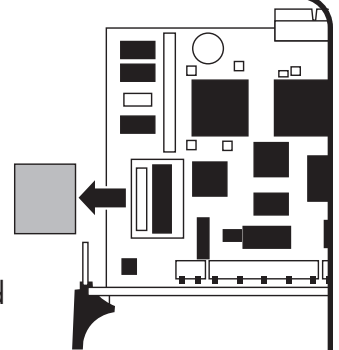

8

- d. Insert the replacement CompactFlash card into the flash memory slot on the Interface Manager card exactly the same way as the original CompactFlash card was oriented. Gently slide the CompactFlash card into the slot until it is securely seated.

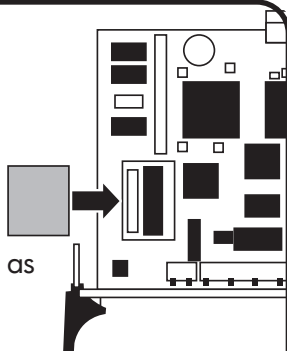


Note: If the CompactFlash card does not slide in easily, the card is upside down. Pull the card back out, turn it over, and reinsert it into the slot.

9

Reinstalling the Interface Manager Card

Align the Interface Manager with the guides in the base module card cage and slide the Interface Manager into the library. Push the ejection handles inward to fully seat the card.

Tighten the captive screws.

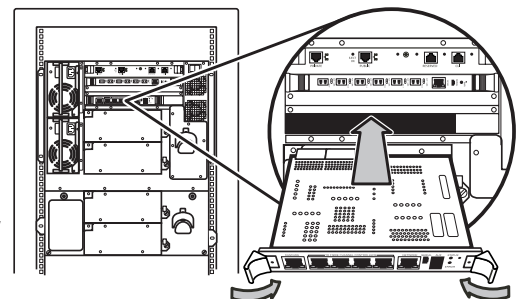


10

Power on the library.

- a. Set the library power switch at the upper right corner to the **ON** position.
- b. Check the power supply power indicators to verify that the power is on.
- c. Verify that the library robotics controller Active indicator is lit.

11

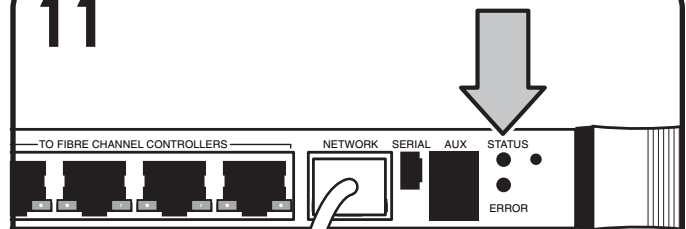

Verify that the status LEDs of the Interface Manager card indicate a normal state. For a description of LED diagnostic codes, refer to the *Troubleshooting* chapter of the *HP StorageWorks Interface Manager and Command View TL installation guide*.

12

Updating Firmware

After replacing the CompactFlash card, you must update the Interface Manager card firmware and reconfigure the Interface Manager settings. To operate with the EML E-Series tape library, the Interface Manager card must have firmware version I155 or later.


To update firmware:

1. Acquire the latest firmware file from:
<http://www.hp.com/support/cvtf>
2. If necessary, transfer the firmware file to a client PC or laptop that will be used in step 3 to connect to the Interface Manager card.
3. Use ftp to transfer the firmware file to a temporary storage area in the Interface Manager card's memory.
 - a. If connected, disconnect the Ethernet cable from the Network port on the Interface Manager card.
 - b. Connect a host PC or laptop to the Cascade port of the Interface Manager card using an Ethernet cable.
 - c. On the host PC or laptop, open a command shell and navigate to the directory that the firmware you downloaded in step 1 is located.
 - d. Enter the following command: `ftp 192.168.2.1`
 - e. Login with the following credentials:
 - User name: `ftp`
 - Password: Use your e-mail address
 - f. If necessary, use the `ls` command to list the contents of the ftp directory.
 - g. Enter the following command to turn on binary transfer mode: `bin`
 - h. Enter the following command to copy the firmware file to the temporary location in the Interface Manager card's memory:
`put <filename>`
where `<filename>` is the filename of the firmware file.
 - i. Use the `quit` command to logoff the ftp session.
4. Start a Telnet session on the PC or laptop that is connected to the Interface Manager card via the Cascade port:
 - a. From a command prompt, enter the following:
`telnet 192.168.2.1`
 - b. At the login prompt, enter the following information:
 - Username: `cliadmin`
 - Password: `clipwd`
5. Enter the following command to update the firmware:
`download mgmt`

Updating Firmware Continued


6. Logoff the telnet connection and disconnect the host PC or laptop from the Cascade port of the Interface Manager card.
7. Reconnect the cables to the Interface Manager card exactly as they were before.
8. Refer to the *Initial configuration steps* section of the *HP StorageWorks Interface Manager and Command View TL user guide* for instructions on how to reconfigure the Interface Manager card. Because configuration information is stored on the CompactFlash card, the previous configuration is lost when the CompactFlash card is replaced.

13

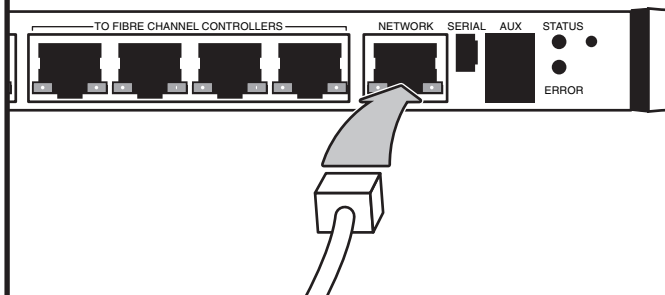

Reconnect the cables to the Interface Manager card exactly as they were connected to the original card.

14

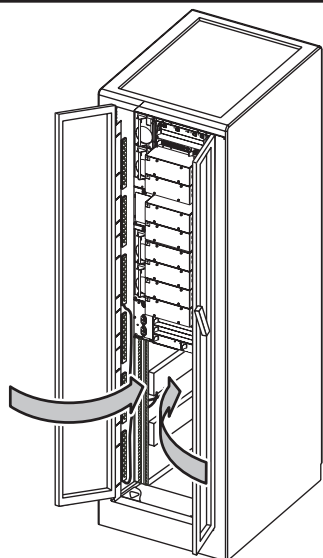

Close the back door of the library.

Getting help

- HP product information:
<http://www.hp.com/products/tapestorage>
- HP technical support and phone numbers:
<http://www.hp.com/support>
- HP StorageWorks Library and Tape Tools (L&TT) diagnostic software:
<http://www.hp.com/support/tapetools>
- Interface Manager and HP StorageWorks Command View TL:
<http://www.hp.com/support/cvtil>

© 2005 Hewlett-Packard Development Company, L.P.

First Edition (May 2005)
Part Number: AD560-96014



AD560-96014

